



# PROFESSIONAL

**Cordless Pruning Shears** 

GP-LS 18/28 Li BL-Solo

Item No.: 3408320

Ident No.: 21013

Bar Code: 4006825679175

The Einhell Professional cordless pruning shears GP-LS 18/28 Li BL-Solo are ideal for professional gardeners and hobby gardeners. It belongs to the flexibly combinable Power X-Change family. The device is driven by a Brushless motor for enhanced power and longer runtime. Once you register online, the Brushless motor has a 10-year guarantee. The cutting capacity of the pruning shears can be set between 14 and 28 mm at the touch of a button. The durable SK5 steel bypass blades ensure efficient cuts. The handy pruning shears have a locking switch, a sturdy plastic cover and a belt clip. Delivered without battery or charger.

OWER CHANGE

#### Features & Benefits

- Member of the Power X-Change family, 1x 18 V battery required
- Brushless motor more power and longer runningtime
- Brushless 10-year motor warranty after registration
- Adjustable cutting capacity for thinner or thicker branches
- Effortless cutting of branches up to 28 mm thickness
- Faster cuts on thin branches with 14 mm cutting capacity
- Bypass blades made from SK5 steel for efficient pruning work
- Clean, sharp cut close to the branch for optimal growth
- Sturdy blade cover for safe storage
- Locking switch for safe transport and storage
- Pressurised ball oiler for easy lubrication of the blade
- Belt clip for optimum carrying comfort
- Comfortable handling thanks to slim design and soft grip
- Supplied without battery and charger (available separately)

#### **Technical Data**

- Cutting width 28 mm - Reduced cutting width 14 mm

## **Logistic Data**

- Product weight (kg) 0.812 - Gross weight (kg) 1.3

- Dimensions single packaging 373 x 117 x 75 mm

- Pieces per export carton 8 Pieces 8.5 kg - Gross weight of export carton

- Dimensions export carton 390 x 315 x 250 mm - Container quantity (20"/40"/40"HC) 6144 | 12864 | 16080



















### Available as special accessories



PXC Battery Mounting Gadget PXC-Battery Accessory Item No.: 4514155 Bar Code: 4006825658774

Einhell Accessory



PXC+ 18V 5-8Ah MULTI Battery Item No.: 4511600

Bar Code: 4006825665055 **Einhell Accessory** 



PXC+ 18V 4,0Ah Battery

Item No.: 4511553 Bar Code: 4006825660869

**Einhell Accessory** 



PXC 18V 3,0Ah Battery Item No.: 4511341

Bar Code: 4006825590593 Einhell Accessory



2,0 Ah Power X-Change Battery

Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory



4-6 Ah Multi-Ah Power X-Change

Plus

Battery Item No.: 4511502

Bar Code: 4006825644210



18V 4Ah PXC Plus Twinpack Battery Item No.: 4511629

Bar Code: 4006825673685

Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB

Battery

Item No.: 4511489

Bar Code: 4006825638578



Power X-Fastcharger 4A

Charger Item No.: 4512103

Bar Code: 4006825650228

Einhell Accessory



Power X-Car Charger 3A

Charger

Item No.: 4512113 Bar Code: 4006825655377 Einhell Accessory



18V Battery Charger 3,0A - PXC

Charger Item No.: 4514095

Bar Code: 4006825655292 Einhell Accessory



18V 4,0Ah PXC Starter Kit A1 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704

Einhell Accessory

Einhell Accessory



18V 4-6Ah & 6A Boostcharger PXC-Starter-Kit Item No.: 4512143 Bar Code: 4006825667653



E-Case S-F System Carrying Case Item No.: 4540011 Bar Code: 4006825653991 **Einhell Accessory** 



5,2 Ah Power X-Change Plus Battery Item No.: 4511437

Bar Code: 4006825616606

Einhell Accessory

PXC+ 18V 4,0Ah SEALED Battery Item No.: 4511627

Bar Code: 4006825673227

Einhell Accessory



PXC+ 18V 3,0Ah SEALED Battery

Item No.: 4511618 Bar Code: 4006825672794

**Einhell Accessory** 



3,0 Ah Power X-Change Plus

Battery Item No.: 4511501 Bar Code: 4006825644197 Einhell Accessory



4,0 Ah Power X-Change Battery

Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack

Battery Item No.: 4511526 Bar Code: 4006825656695

Einhell Accessory



18V 3Ah PXC Plus Twinpack Battery Item No.: 4511631

Bar Code: 4006825673692

Einhell Accessory



2x2 Power X-Quattrocharger 4A

Charger Item No.: 4512102

Bar Code: 4006825649536

Einhell Accessory



Power X-Twincharger 3A

Charger Item No.: 4512069

Bar Code: 4006825629729

Einhell Accessory



Power X-Boostcharger 8A

Charger Item No.: 4512155 Bar Code: 4006825670554 Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 Einhell Accessory

Einhell Accessory

Einhell Accessory



2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit Item No.: 4512112 Bar Code: 4006825655766



E-Case L with wheels System Carrying Case Item No.: 4540014 Bar Code: 4006825660562



E-Case M System Carrying Case Item No.: 4540021 Bar Code: 4006825667721 **Einhell Accessory** 

## **Battery-Running-Times**

	- <del>\\\\\</del>
One Battery for All	cutting <sup>1</sup>
	(pieces)
1.5 Ah	1080
2.0 Ah	1450
2.5 Ah	1830
3.0 Ah	2175
4.0 Ah	2900
5.2 Ah	3860
6.0 Ah	4350
8.0 Ah	5800

#### Test setup:

<sup>1)</sup> wood - round dry beech wood Ø 15 mm